

Instruction Manual


DIGITRADIO 600

Internet, DAB+ and FM Digital Radio with CD and Bluetooth



TechniSat

Important Safety Instructions

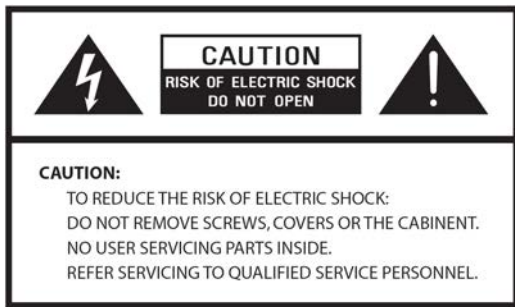

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use the speaker near water.
6. Clean only with dry cloth.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS SPEAKER TO RAIN OR MOISTURE.

To reduce the risk of electrical shock, fire, etc.:

1. Do not place unit near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
2. Do not block any ventilation openings of unit.
3. The unit shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the unit.
4. Do not place any heavy loads onto the unit, and do not step on it, the load may fall and cause serious injury to the unit.
5. Please read Rating Labels at the rear of unit for power input and other safety information.
6. This unit is intended to be used only with the power supply provided.
7. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at any point where they exit from the unit.
8. Never unplug your unit by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
9. Repair or replace all electric service cords that have become frayed or otherwise damaged immediately. Do not use a cord that shows cracks or abrasion damage along its length, the plug, or the connector end.
10. To prevent fire or shock hazard, do not use this plug with an extension cord or other outlet unless the blades can be fully inserted to prevent blade exposure.
11. During lightning or raining days, unplug the unit for additional protection during thunderstorms or when the unit is not used for prolonged periods. This will prevent damage to the unit from lightning and power surges.
12. Do not attempt to carry out any service work yourself. By opening or removing the cabinet, you may be exposed to dangerous voltage or other hazards. Any service work should be carried out by qualified technicians.
13. The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.
14. The means of disconnecting this apparatus from the mains supply is plug of adaptor. The

disconnect device shall remain readily operable.

15. The battery of remote control shall not be exposed to excessive heat such as sunshine, fire or the like.
16. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
17. In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.


Contents

Important Safety Instructions	2
Contents	4
Your radio	6
Front View	6
Top View	7
Rear View	7
Remote Control View	8
Getting Started	10
Setup Wizard	12
Internet Radio Mode	15
Local 'Country'	15
Selecting a station through 'Stations'	16
Selecting a program through 'Podcasts'	17
Getting Access Code and FAQ from 'Help'	18
Adding station to 'My Favourites'	18
Adding station to 'My Added Stations'	19
Viewing Station Information	20
Storing Preset Stations	20
Recalling a Preset Station	20
Spotify	21
Using Spotify Connect	21
Controlling Spotify Connect	22
Using another Spotify account with your radio	22
Music player Mode	23
Sharing Media with Windows Media Player	23
Playing Shared Media	24
USB Playback	25
My Playlist	25
Repeat Play Mode	25
Shuffle Play Mode	25
Clearing My Playlist	25
Prune Servers	26
Now Playing Information	26
DAB Mode	27
Selecting DAB Mode	27
Selecting another Station	27
Secondary Service	27
Scanning Stations	28
Manual Tune	28
Prune Invalid	28
DRC (Dynamic Range Control) value	28
Changing Station Order	29
Viewing Station Information	29

Storing Preset Stations	29
Recalling a Preset Station.....	30
FM Mode	31
Selecting FM Mode	31
Scan settings	31
Audio Settings.....	31
Storing Preset Stations	32
Recalling a Preset Station.....	32
CD Mode	33
Inserting CD	33
Playing CD Track	33
Ejecting CD from CD Slot	33
Bluetooth Mode	34
NFC (Near Field Communication).....	34
Aux in Mode	35
General Operation.....	36
Setting Sleep.....	36
Setting Alarm	36
Setting Equaliser	37
Network Setup	37
Setting Time/Date	38
Setting Language.....	38
Factory Reset.....	38
Software Update – Over the network.....	39
Setup Wizard	39
Viewing System Info	39
Setting Backlight	40
Multi-room	40
Troubleshooting	44
Specifications	45


Your radio

Front View

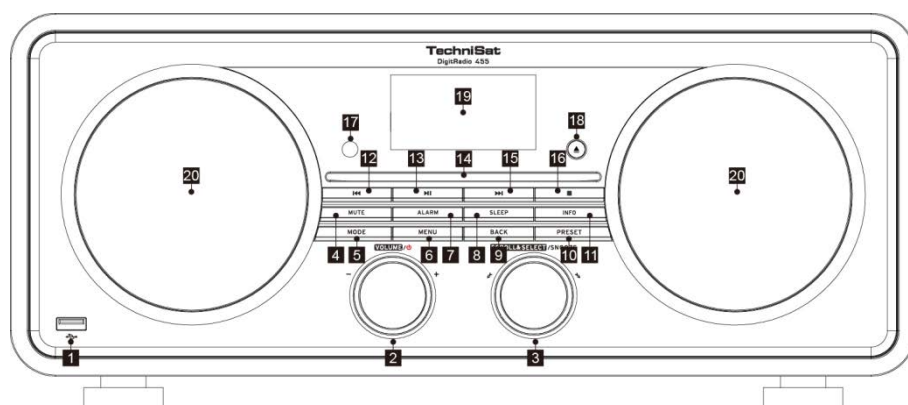


1. **USB port**
For charging mobile device and media playback.
2. **VOLUME/⏻ knob**
Press to switch radio on or standby.
Turn to adjust volume level.
3. **SCROLL/SELECT/SNOOZE knob**
Turn to browse options.
Press to confirm selection.
Press to activate snooze function when alarm sounds.
4. **MUTE button**
Press to mute radio.
Press a second time to resume sound.
5. **MODE button**
Press to switch among Internet, Spotify, Music player, DAB, FM, CD, Bluetooth and Aux in mode.
6. **MENU button**
Press to display or exit menu screen.
7. **ALARM button**
Press to set alarm.
8. **SLEEP button**
Press to set sleep timer.
9. **BACK button**
Press to return to previous option.
10. **PRESET button**
Press and hold to save preset station.
Press to recall preset station.
11. **INFO button**
Press to view program information.
12. **⏮ button**
Press to skip to previous track in Spotify, Music player, CD and Bluetooth mode.
Press and hold to fast reverse current playing track in Spotify, Music player and CD mode.
13. **⏸ button**
Press to pause or play track in Spotify, Music player, CD and Bluetooth mode.
14. **CD slot**
15. **⏭ button**
Press to skip to next track in Spotify, Music player, CD and Bluetooth mode.
Press and hold to fast forward current playing track in Spotify, Music player and CD mode.
16. **■ button**
Press to stop playing in CD mode.
17. **Remote control sensor**
18. **▲ button**
Press to eject CD from CD slot.
19. **Display**
20. **Speaker**

Top View

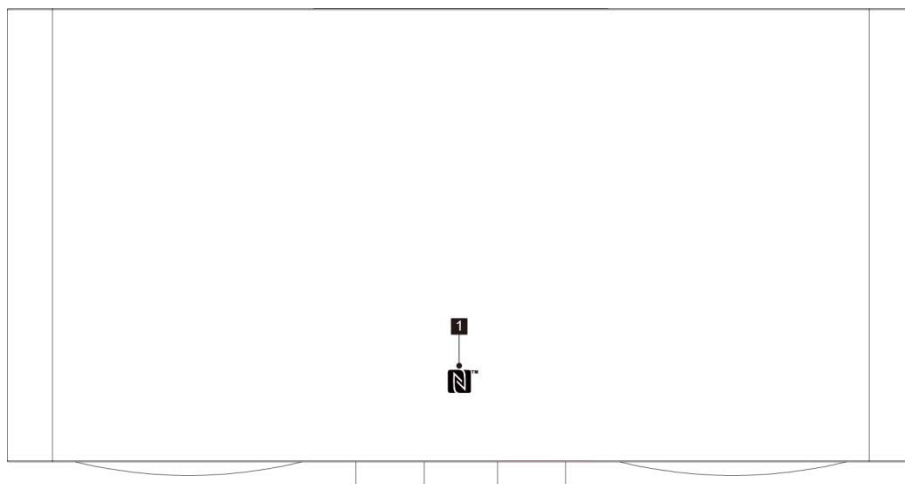





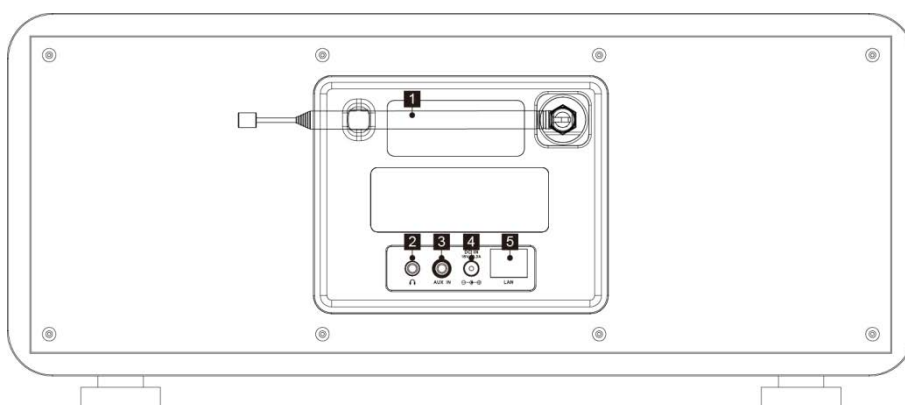






1. NFC sensor


Rear View








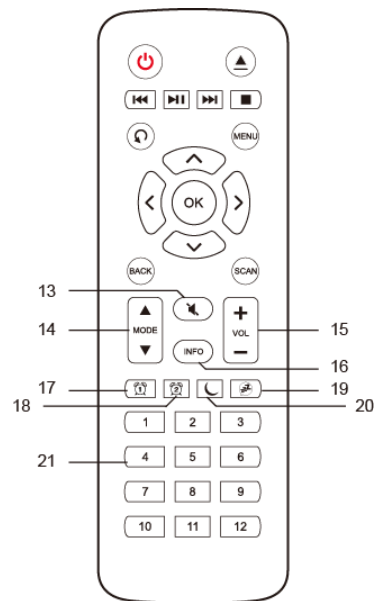
1. DAB/FM antenna
2. **Headphones** socket
3. **AUX IN** socket
4. **DC IN** socket
5. **LAN** socket

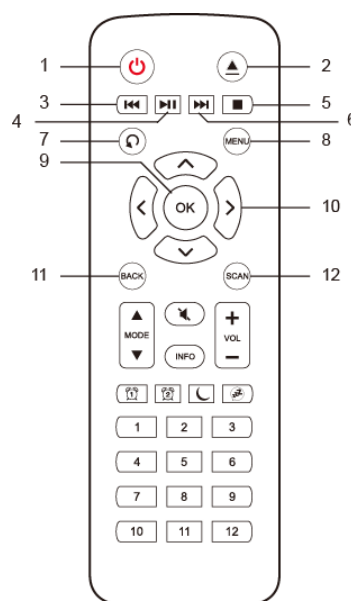Remote Control View

1.  button
Press to switch radio on or standby.
2.  button
Press to eject CD from CD slot.
3.  button
 - Press to skip to previous track in Spotify, Music player, CD and Bluetooth modes.
 - Press and hold to fast reverse current playing track in Music player, CD and Bluetooth modes.
4.  button
Press to pause or play current playing track in Spotify, Music player, CD and Bluetooth modes.
5.  button
Press to stop playing track in CD mode.
6.  button
 - Press to skip to next track in Spotify, Music player, CD and Bluetooth modes.
 - Press and hold to fast forward current playing track in Music player, CD and Bluetooth modes.
7.  button
Press repeatedly to set play mode Repeat one/Repeat all/Shuffle/None in CD mode.
8. **MENU** button
Press to display menu or exit menu.
9. **OK** button
Press to confirm your selection.
10. Navigation buttons
 -  up
 -  down
 -  backward
 -  forward
11. **BACK** button
Press to return to previous menu screen.
12. **SCAN** button
Press to scan for DAB and FM stations.




13.  button
Press to mute radio or resume sound.
14. **MODE** ▲/▼ buttons
Press to switch among Internet, Spotify, Music player, DAB, FM, Bluetooth and Aux in mode.
15. **VOL +/-** buttons
Press to adjust volume.
16. **INFO** button
Press to view station information.
17.  button
Press to set alarm 1.
18.  button
Press to set alarm 2.
19.  button
Press to activate snooze when alarm sounds.
20.  button
Press to set sleep time.
21. Preset buttons 1-12
 - Press and hold to store preset station.
 - Press to recall stored preset station.



Replacing batteries:

1. Open the battery compartment cover at the back of your remote control.
2. Install 2pcs new AAA size batteries, referring to the markings direction inside the battery compartment.

 **Note:** do not reverse any battery and do not mix battery types, also do not mix old and new batteries. When discard your old battery, please considering eco-friendly.
3. Cover the battery compartment door.

Getting Started

Carefully remove your radio from the box. You may wish to store the packaging for future use.

What you can find inside of your package

- Main unit x 1
- Power adaptor x 1
- Remote control x 1 + AAA alkaline battery x 2
- Instruction manual x 1

Positioning your Radio

Place your radio on a flat / stable surface that is not subject to vibrations.

Avoid the following locations:

- Where the unit will be exposed to direct sunlight.
- Where the unit will be close to heat radiating sources.
- Where the humidity is high and ventilation is poor.
- Where it is dusty.
- Where it is damp or there is a possibility of water dripping or splashing onto unit.

LAN Setting:

- Make sure the internet environment is ready and the network settings is available for LAN (ADSL or Cable Modems is highly recommended).
- To find the Radio's LAN MAC address, Please follow: **Main menu - System settings - Network - View settings - MAC address.**

Wireless LAN Setting

- A broadband Internet connection.
- A wireless access point (Wi-Fi) connected to your broadband Internet, preferably via a router.
- If your wireless network is configured to use Wired Equivalent Privacy (WEP) or Wi-Fi Protected Access (WPA) data encryption then you need to know the WEP or WPA code so you can get the radio to communicate with the network.
- If your wireless network is configured for trusted stations you will need to enter the Radio's MAC address into your wireless access point. To find the Radio's MAC address use menu items as follows: **Main menu - System settings - Network - View settings - MAC address.**

Before you continue, make sure that your wireless access point is powered up and connected to your broadband Internet, or your LAN cable is setting well. To get this part of the system working, read the instructions supplied with the wireless access point and LAN connecting are highly recommended.

Adjusting the Antenna

Extend the antenna to ensure you receive the best reception possible in both DAB and FM radio modes. It may be necessary to adjust the position of the radio and /or antenna to achieve the best signal.

Turning the Unit On/Off

Connect the plug at the end of power adaptor cable to the **DC IN** socket at the rear of unit. Then insert the power adaptor into the mains socket.

Press the **VOLUME/⏻** knob to turn unit on.

Press the **VOLUME/⏻** knob a second time to switch unit standby.

To turn off unit completely, unplug the power adaptor from the mains socket.


Radio Auto-standby

To avoid unnecessary energy consumption, the radio will automatically go to standby after 15 minutes if the radio isn't playing any program/track.

Charging from USB port

The **USB** port is designed for media playback and charging mobile devices (e.g. MP3 player, mobile phone, etc.). It supplies 5 V DC at a charging current of up to 1000 mA (1 A).

Use a USB cable (not included) to connect mobile device to the **USB** port of the unit and the mobile device will start charging.

 **Note:** the **USB** port is only suitable for charging 5V 1A (or less) mobile phone device and it support charging in all modes except Music player mode. In Music player mode the USB port is only for media playback.


Volume Control

Adjust the radio volume by turning **VOLUME/⏻** knob. Turn anti-clockwise to decrease volume and turn clockwise to increase volume.

Using Headphones

You will require headphones fitted with a 3.5 mm diameter stereo plug. The **Headphones** socket is located at the rear of unit. Headphones are not supplied with this radio.

Turn down the volume before connecting headphones. Slowly raise the volume with the headphones on until you reach your desired level.

 **Caution:** long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods of time.

Setup Wizard

1. For initial use, the display will show 'Setup wizard' screen.



2. Press **SCROLL/SELECT/SNOOZE** knob to confirm 'YES' to start setup. Options in the setup wizard include the following:

Date/Time

Set 12 or 24 hour format

Auto update

Synchronously update clock from the playing program you selected or set by yourself.


- Update from DAB
- Update from FM
- Update from Network
Select your time zone and daylight savings is needed.
- No update
Set the date and time is needed.

Keep network connected

Keeps network connected especially in non-internet mode (i.e. DAB, FM, CD, Bluetooth or Aux in mode) to enable you can use Spotify and Multi-room features all the time.

Select YES or NO


3. The Wizard will now scan your location for accessible wireless networks. When the scan has finished, a list of networks will be displayed.

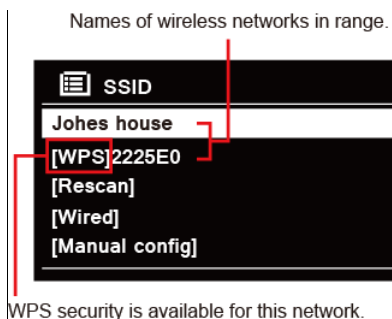

WPS security is available for this network.

Devices that support connection via WPS (Wi-Fi Protected Setup) are identified in the list as **[WPS]**.

4. Turn **SCROLL/SELECT/SNOOZE** knob and then press it to select a wireless network you wanted.
 - 1) If a WEP/WPA key (password) is required, radio will ask you to input the WEP/WPA code and display the password entry screen as follows:

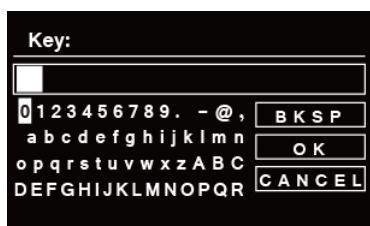

Note: If a password (WEP/WPA) isn't required by your network, radio will connect to the network automatically.

- a. Turn **SCROLL/SELECT/SNOOZE** knob to cycle through the alphanumeric character list, press **SCROLL/SELECT/SNOOZE** knob to select an appointed character.

Note: WEP/WPA pass codes are case-sensitive.

- b. If a wrong operation is being conducted, select **BKSP** to delete designated character.

Note: **BKSP** = Backspace; **CANCEL** means return to previous track; radio will automatically save the WEP/WPA you've input, so no bother to re-enter these codes.

- c. After selecting the final character of your password, turn **SCROLL/SELECT/SNOOZE** knob to **OK**, and then press **SCROLL/SELECT/SNOOZE** knob to confirm. The radio is connected to wireless network.


- 2) If you wish to establish a connection via WPS, press **SCROLL/SELECT/SNOOZE** knob after you have selected desired network. The radio then offers the option to initiate WPS. Turn **SCROLL/SELECT/SNOOZE** knob to select through Push Button, Pin and Skip WPS, press **SCROLL/SELECT/SNOOZE** knob to confirm.

Push Button	<p>You must start the WPS scan on the remote station (e.g. router). Consult the manual for your router or Access Points (AP) to learn how to do this.</p> <p>After you have done this, press SCROLL/SELECT/SNOOZE knob on the radio and then both devices will establish a connection.</p>
Pin	<p>The radio creates an 8-digit number, which you then have to enter into the remote station.</p> <p>After entering the PIN, press the SCROLL/SELECT/SNOOZE knob to establish the connection between both devices.</p>
Skip WPS	<p>In addition to a WPS connection, you can also establish a connection using a Pre-Shared-Key. The required key is often on the rear of the router, or you may have defined it yourself.</p> <p>This method is used automatically for networks without WPS. You can call up the Pre-Shared-Key function on networks with WPS by selecting menu item 'Skip WPS'.</p> <p>An input field should now appear. You can enter the required key (PSK) by turning and pressing SCROLL/SELECT/SNOOZE knob, and then select 'OK' and press SCROLL/SELECT/SNOOZE knob complete the entry. The radio should now establish the connection to the network.</p>

5. If you want to use wired network, turn **SCROLL/SELECT/SNOOZE** knob to select [**Wired**], and then press **SCROLL/SELECT/SNOOZE** knob to confirm, the display will show "Waiting for Ethernet". Connect LAN cable to the **LAN** socket at the rear of unit, then the radio is connected to wired network.
6. Setup wizard completed, press **SCROLL/SELECT/SNOOZE** knob again to exit.

Internet Radio Mode

1. The display will show 'Main menu' after 'Setup wizard' completed. Press **SCROLL/SELECT/SNOOZE** knob to select Internet radio mode.

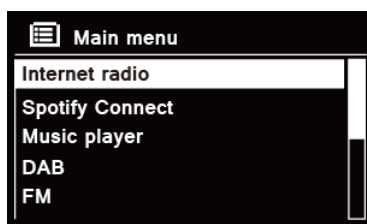

2. While 'Station list' is highlighted, press **SCROLL/SELECT/SNOOZE** knob to confirm.




3. Then refer following section to choice stations. Or if failed to connect to network, please follow:
 - a. Check your Router, see it working normally or not;
 - b. Relocate your radio to a stronger signal position is necessary.
 - c. Make sure your password is correct input.

Local 'Country'

Local 'Country' will change according to your current location (e.g. Local Australia). It displays local stations of your current location.

1. To enter local stations, press **MENU** button - **Station list** - **Local 'Country'**, press **SCROLL/SELECT/SNOOZE** knob to confirm.

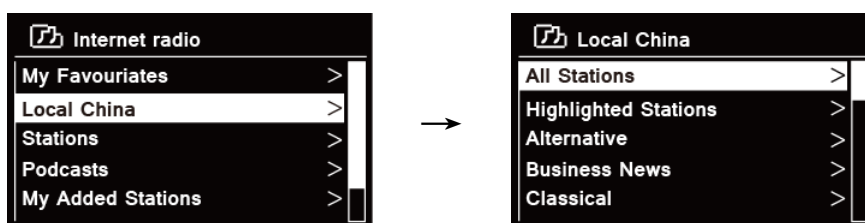

2. Station genres are listed. Turn **SCROLL/SELECT/SNOOZE** knob to select the genre you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
3. Turn **SCROLL/SELECT/SNOOZE** knob to select you desired station, and then press **SCROLL/SELECT/SNOOZE** knob to confirm broadcasting.

Selecting a station through 'Stations'


Stations enables you to select a station from categories: Location, Genre, Popular stations or New stations, or search stations.

1. Press **MENU** button - **Station list** - **Stations**, press **SCROLL/SELECT/SNOOZE** knob to confirm.



2. In 'Stations' menu:


- **'Location'** enables you to choose from the radio stations provided by any country which you choose from a list.
 - a. While **'Location'** is highlighted, press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - b. Turn **SCROLL/SELECT/SNOOZE** knob to select the region you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - c. Turn **SCROLL/SELECT/SNOOZE** knob to select the country you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - d. Turn **SCROLL/SELECT/SNOOZE** knob to select the station you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm. The station will be broadcast.
- **'Genre'** enables you to choose radio stations according to their content, for example Classic Rock, Sport, News, etc.
 - a. While **'Genre'** is highlighted, press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - b. Turn **SCROLL/SELECT/SNOOZE** knob to select the genre you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - c. Turn **SCROLL/SELECT/SNOOZE** knob to select through All Stations, Highlighted Stations or the country you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - d. Turn **SCROLL/SELECT/SNOOZE** knob to select the station you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm. The station will be broadcast.
- **'Search stations'** enables you to enter all or part of station name to find a station.
- **'Popular stations'** enables your radio to list the stations that have the most listeners.
- **'New stations'** enables your radio to list the stations that have recently joined the Internet radio network.

 **Note:** Some radio stations do not broadcast 24 hours per day, and some stations are not always on-line.

Selecting a program through 'Podcasts'

Podcasts enables you to select a podcast from categories: Location or Genre, or search podcasts.

1. Press **MENU** button - **Station list** - **Podcasts**, press **SCROLL/SELECT/SNOOZE** knob to confirm.

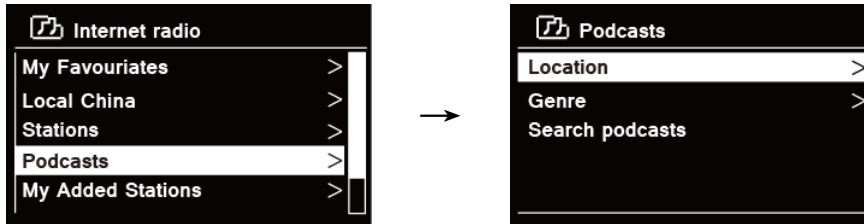


2. In '**Podcasts**' menu:

- '**Location**' enables you to choose from the podcasts provided by any country which you choose from a list.
 - a. While '**Location**' is highlighted, press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - b. Turn **SCROLL/SELECT/SNOOZE** knob to select the region you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - c. Turn **SCROLL/SELECT/SNOOZE** knob to select the country you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - d. Turn **SCROLL/SELECT/SNOOZE** knob to select All Shows or By Genre, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - e. Turn **SCROLL/SELECT/SNOOZE** knob to select the podcast you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm. The podcast will be played.
- '**Genre**' enables you to choose radio stations according to their content, for example Classic Rock, Sport, News, etc.
 - a. While '**Genre**' is highlighted, press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - b. Turn **SCROLL/SELECT/SNOOZE** knob to select the genre you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - c. Turn **SCROLL/SELECT/SNOOZE** knob to select the podcast you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm. The podcast will be played.
- '**Search stations**' enables you to enter all or part of podcast name to find a podcast.

Getting Access Code and FAQ from ‘Help’

1. Press **MENU** button - **Station list - Help**, press **SCROLL/SELECT/SNOOZE** knob to confirm.

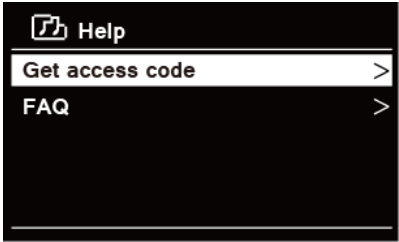

2. Turn **SCROLL/SELECT/SNOOZE** knob to select Get access code or FAQ, and then press **SCROLL/SELECT/SNOOZE** knob to confirm

Get access code	It uses for creating an account when registering your radio on portal www.wifiradio-frontier.com Refer to section ‘Adding station to ‘My Favourites’.
FAQ	Turn SCROLL/SELECT/SNOOZE knob to select question, and then press SCROLL/SELECT/SNOOZE knob to listen the FAQ.

Adding station to ‘My Favourites’

You have two ways to add your favorite stations to ‘My Favourites’ list. It will make you easier to find the stations that you like.

Adding a station while listening to it

1. While you are listening to an internet radio station, press and hold **SCROLL/SELECT/SNOOZE** knob until display shows ‘Favorite added’.
2. The station will now be stored in a folder called ‘Stations’. Any station stored in this way will be placed in the ‘Stations’ folder.

Adding stations via the website


1. To register your radio with the portal: www.wifiradio-frontier.com



2. Create account login, enter **Access code** is required. Access code can be found from ‘Station list - Help - Get access code’.

A screenshot of the 'Create account login' form on the website. It includes instructions for creating an account, a field for 'Access code' (highlighted with a red box and a red arrow), and fields for 'E-mail address', 'Password', and 'Enter password again'. There are also checkboxes for 'I agree to the terms and conditions' and 'I agree to the privacy policy', and 'Register' and 'Cancel' buttons at the bottom.

3. To add a Favourite Station, first find a station and then click the “Add” icon.

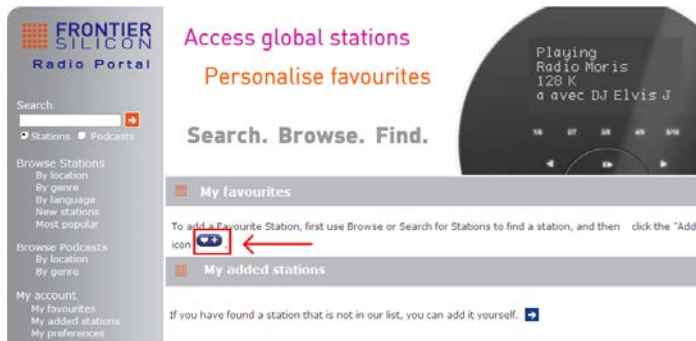

4. After you added the stations, in order to have your radio access your new settings, get your radio power off for several minutes is necessary.
 5. The added stations are accessible by pressing **MENU** button - **Station list** - **My favourites**.
- Note: doing a 'factory reset' cannot erase 'my favourites stations'.*


Adding station to 'My Added Stations'

Even though the Internet radio portal contains thousands of stations, you may want to listen to stations not listed. You can add your own stations via the portal (www.wifiradio-frontier.com).

1. Visit portal www.wifiradio-frontier.com and login as a member as you registered when adding station to 'My favourites'.



2. To add your own station, click the icon.

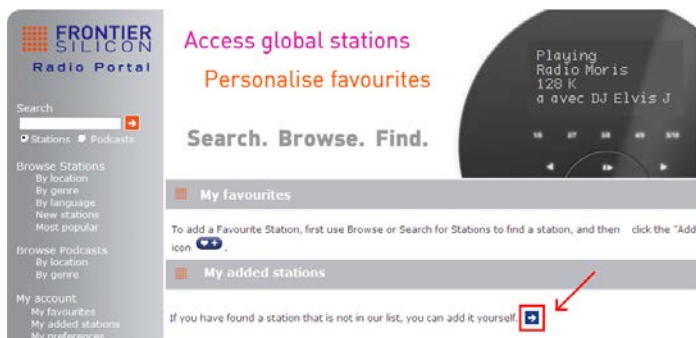

3. After you added the stations, in order to have your radio access your new settings, get your radio power off for several minutes is necessary.
4. The added stations are accessible by pressing **MENU** button - **Station list** - **My added stations**.

Note: doing a 'factory reset' cannot erase 'my added stations'.


Viewing Station Information

Internet programs broadcast additional information. Press **INFO** button repeatedly while a program is playing, the display will show the information through Station Description, Genre, Country, Reliability, Bit rate, Codec, Sampling Rate, Playback Buffer and Date.

Storing Preset Stations

Your radio can store up to 12 of your favourite Internet stations. This will enable you to access your favourite stations quickly and easily.

1. While playing your favourite station, press and hold **PRESET** button until display shows as below:

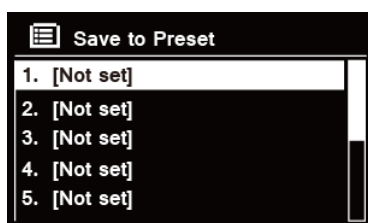

2. Turn **SCROLL/SELECT/SNOOZE** knob to cycle through the preset numbers 1-12.
3. Select one preset number and then press the **SCROLL/SELECT/SNOOZE** knob, display will show 'Preset stored'.
4. Preset number 'P#' will show on the display.

Recalling a Preset Station

1. Press **PRESET** button to show the saved preset stations.



2. Turn **SCROLL/SELECT/SNOOZE** knob to select the preset station you want to play and then press the **SCROLL/SELECT/SNOOZE** knob to confirm.
3. The display will show 'Preset Empty' if the preset station isn't allocated.

Spotify

Spotify gives you millions of songs at your fingertips. The artists you love, the readymade playlists for every mood and genre, the latest hits and new discoveries just for you.

With Spotify Connect feature, you can play and control all this music wirelessly. Choose music on your smartphone or tablet, and listen on your radio.

*For service availability in your country, check www.spotify.com

Using Spotify Connect

Your radio has Spotify Connect built in. This lets you control the music playing on your radio using the Spotify app on your smartphone or tablet.

Listening is seamless – you can take calls, play games, watch a video, even switch your phone off, all without interrupting the music. It's a better way to listen at home.


You'll need a Spotify Premium account to use Spotify Connect. If you don't have it, just go to www.spotify.com/freetrial for your free 30-day trial.

1. Download Spotify app for your smartphone or tablet (iOS or Android).
2. Connect your radio to the same network as your smartphone or tablet, and then press **MODE** button on your radio repeatedly to select **Spotify Connect** mode.
3. Open the Spotify app on your smartphone or tablet, and play any song.
4. Tap the square image of the song's cover art in the bottom left of the screen. Then tap the


Connect icon .

5. Tap 'DigitRadio 455' from the list. If you can't see it, just check it's connected to the same network as your phone of tablet.

You will notice that your radio is currently listed as 'DigitRadio 455 xxxxxxxxxxxx' (the 12 digit alphanumeric code is the MAC address of your radio) in the Spotify App.

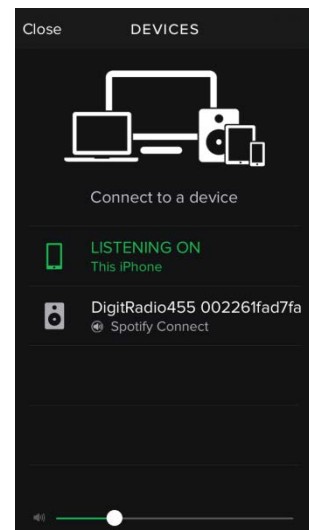

6. The **Connect** icon will turn green to signify that your radio is now selected and being used for audio playback.
7. Your Spotify app will only recognize your radio when the radio is connected to the internet (i.e. in Internet Radio, Spotify Connect or Music player mode). To use Spotify when your radio is in non-internet modes (i.e. in DAB, FM, CD, Bluetooth or Aux in mode) you need to select **Main menu - System settings - Network - Keep network connected - YES**. This also allows you to wake the radio from standby using your Spotify app.

 **Note:** *If unattended to use radio for long periods of time, e.g. overnight, while on holiday or while out of the house, select 'NO' to avoid unnecessary energy consumption.*

*For information on how to set up and use Spotify Connect please visit www.spotify.com/connect

Controlling Spotify Connect

You can now control Spotify from the app like normal; search for and play your tracks, change the volume and add to playlists even though playback is through your radio. The next time you open the Spotify app, playback will continue through your radio.

Spotify Connect is a cloud-based service, therefore after activation on your radio, your smartphone or tablet no longer needs to be on the same network to control audio playback.

Using another Spotify account with your radio

Your Spotify account details are now stored on your radio. To overwrite this with another Spotify account, simply follow the activation steps again whilst running the Spotify app using your desired account. Please remember that both your smartphone or tablet and your radio need to be on the same network for the overwriting to occur.

Music player Mode

In order for your radio to play music files from a computer, the computer must be set up to share files or media.



The built-in Music player allows devices like this radio to play unprotected audio files (AAC, MP3, WMA) from a shared media library, navigating through tag menus such as Artist, Album or Genre. If you are running a suitable server system such as a PC with Windows Media Player10 or later (WMP), and your music library is well-tagged, then it is recommended to use media sharing. Only the UPnP (Universal Plug and Play) server needs to be set up. (iTunes does not currently work as a UPnP media server.)

Sharing Media with Windows Media Player


The most common UPnP server is Windows Media Player (10 or later. View version from **Help - About Windows Media Player**). Alternatively, other UPnP platforms and servers may be used.

To set up WMP for media sharing, perform the following steps:


1. Ensure that the PC is connected to the network.
2. Ensure that the radio is powered on and connected to the same network.
3. In WMP, add to the media library the audio files and folders you want to share with your radio by selecting **Organize - Manage Libraries - Music / Videos / Pictures / Recorded TV**, click 'Add' to add audio files and folders and then click 'OK' to finish adding.

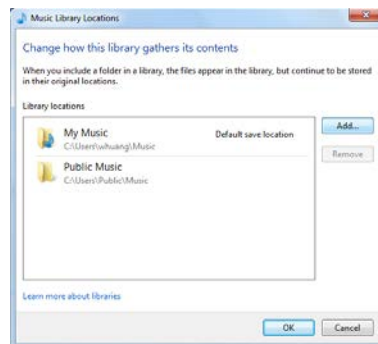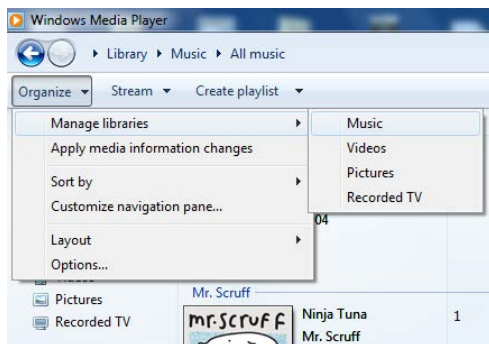

4. In WMP, enable media sharing (**Stream - More streaming options...**).

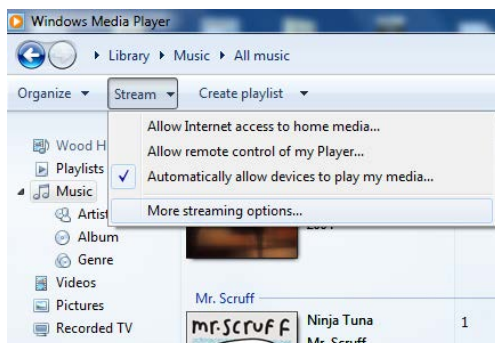


- Make sure that the radio has access to the shared media by selecting it and clicking 'Allow'. You can also set a name for the shared media in the box of 'Name your media library'. Click 'OK' to close the dialogue boxes.

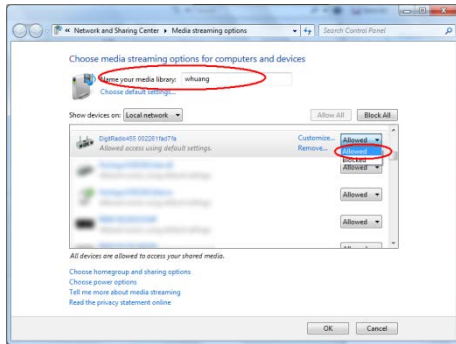


- The PC is now ready to stream the music to the radio. The WMP UPnP service runs in the background; there is no need to start WMP explicitly.

Playing Shared Media

- Press **MODE** button repeatedly to select Music player mode.
- While 'Shared media' is highlighted, press **SCROLL/SELECT/SNOOZE** knob to confirm.

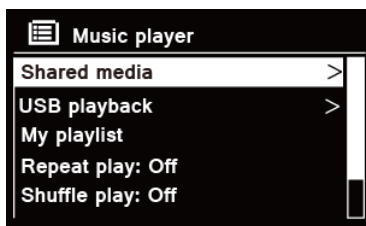

- Available media servers will be listed. Turn **SCROLL/SELECT/SNOOZE** knob to select and press to confirm, and then step by step to your selecting music.

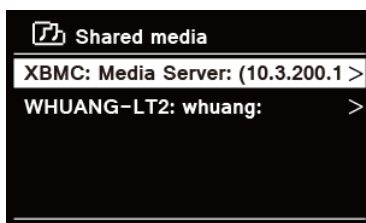

- When a track is playing, you can:
 - Press **⏮** button to skip to previous track; press and hold **⏮** button to fast reverse current playing track.
 - Press **⏸** button to pause or play current playing track.
 - Press **⏭** button to skip to next track; press and hold **⏭** button to fast forward current playing track.
 - Switch radio to other modes to stop playing.

USB Playback

The USB playback feature enables you to play music of MP3, WMA and AAC formats in your USB disk.

1. Inset USB disk to USB port on the rear of unit, the display will show “USB disk attached – Open folder?” after 5 seconds.
2. Turn **SCROLL/SELECT/SNOOZE** knob and then press to select '**YES**', and then step by step to find you desired music, press **SCROLL/SELECT/SNOOZE** knob to confirm.
3. If you selected '**NO**' to don't open folder, when you want to play the music in the USB disk later, you can press **MODE** repeatedly to select **Music player** mode, turn **SCROLL/SELECT/SNOOZE** knob and then press to select 'USB playback'.

My Playlist

The My Playlist feature enables you to create a playlist of your favourite tracks from your music libraries.

Once you have your playlist ready you can choose to play through the playlist on your radio and can also set shuffle and repeat play functions while your playlist is playing.

1. To save a track to 'My playlist', browse the track you want to add to the playlist, press and hold **SCROLL/SELECT/SNOOZE** knob, and then the track is added to the playlist.
2. To play 'My playlist', press **MENU** button, and then turn **SCROLL/SELECT/SNOOZE** knob to select 'My playlist', press **SCROLL/SELECT/SNOOZE** knob to confirm. Browse the track you want to play, press **SCROLL/SELECT/SNOOZE** knob to select.

Repeat Play Mode

Press **MENU** button, and then turn **SCROLL/SELECT/SNOOZE** knob to select 'Repeat play: Off', then press **SCROLL/SELECT/SNOOZE** knob repeatedly to shift repeat play 'On' or 'Off'.

Shuffle Play Mode

Press **MENU** button, and then turn **SCROLL/SELECT/SNOOZE** knob to select 'Shuffle play: Off', then press **SCROLL/SELECT/SNOOZE** knob repeatedly to shift repeat play 'On' or 'Off'.

Clearing My Playlist

This feature enables you to clear the contents of your playlist.

1. Press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'Clear My playlist', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Select '**YES**' to clear my playlist.

Prune Servers

The Prune Servers feature enables you to remove music servers that are no longer available to you to browse for music.

1. Press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'Prune servers', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Select 'Yes' to 'Prune shared media wake on LAN servers'.

Now Playing Information


While a track is playing, the display shows the track and a progress bar with figures for elapsed and total track time.

To view further information, press **INFO** button repeatedly to show the information through Artist, Album, Bit Rate, Codec, Sampling Rate, Playback buffer and Date on the display.


DAB Mode

Selecting DAB Mode

1. Press **MODE** button repeatedly to select DAB mode.
2. For initial use, radio will carry out a full scan and store stations list in memory

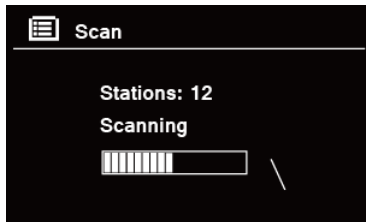

3. Once the scanning is completed, the DAB/DAB+ stations will be displayed in alphanumeric order. The first station in the list will be selected to broadcast.

 **Note:** if no DAB/DAB+ signal is found in your area, it may be necessary to relocate your radio to a stronger signal area.

Selecting another Station

1. While a program is playing, turn **SCROLL/SELECT/SNOOZE** knob to browse through station list, and then press **SCROLL/SELECT/SNOOZE** knob to confirm the station you wanted.
2. Alternatively, while a program is playing, press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'Station list', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
3. Turn **SCROLL/SELECT/SNOOZE** knob to select the station you want to play, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.

Secondary Service

You may see a ">>" symbol after the name of the station, this indicates that there are secondary services available to that station. These secondary services contain extra services that are related to the primary station. E.g. a sports station may want to add extra commentaries. The secondary services are inserted directly after the primary station (a "<<" symbol is before the name of the station) in the station list.

To select the secondary station, turn **SCROLL/SELECT/SNOOZE** knob until you find the secondary service you want, then press **SCROLL/SELECT/SNOOZE** knob to select it.

When the secondary service ends, the unit will automatically switch back to the primary station.

Scanning Stations


Press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'Scan', and then press **SCROLL/SELECT/SNOOZE** knob to full scan.

Manual Tune

This can help you when adjusting your antenna or when adding stations that were missed while auto tuning.

1. Press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'Manual tune', and then press **SCROLL/SELECT/SNOOZE** knob to confirm, the display will show the channel number and frequency.
2. Turn **SCROLL/SELECT/SNOOZE** knob to select the channel you wanted, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.



 **Note:** If there is a multiplex corresponding to this channel and frequency, then the display will show a tuning meter with the signal strength and the multiplex name after a few seconds. The new stations will be added to station list automatically.

3. To play the station, first press **BACK** button repeatedly to exit manual tune.

Prune Invalid

You may remove all unavailable stations from the station list.

1. Press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'Prune invalid', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Turn **SCROLL/SELECT/SNOOZE** knob to select 'YES', and then press **SCROLL/SELECT/SNOOZE** knob to confirm removing all invalid stations.

DRC (Dynamic Range Control) value

If you are listening to music with high dynamic range in a noisy environment (for example classical music while cooking), you may wish to compress the audio dynamic range. This makes quiet sounds louder and loud sounds quieter.

1. Press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'DRC', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Turn **SCROLL/SELECT/SNOOZE** knob to select 'DRC high', 'DRC low' or 'DRC off', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.

Changing Station Order

You may want to display the stations in different order.

- 1. Press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'Station order', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
- 2. Turn **SCROLL/SELECT/SNOOZE** knob to select 'Alphanumeric', 'Ensemble' or 'Valid', and then press **SCROLL/SELECT/SNOOZE** knob to confirm your selecting option.


Alphanumeric	Display all stations in alphanumeric order.
Ensemble	List currently broadcasting active stations before inactive ones.
Valid	Remove inactive stations from the station list.

Viewing Station Information


DAB/DAB+ stations broadcast additional information. Press **INFO** button repeatedly while a program is playing to view information through DLS (Dynamic Label Segment), Ensemble, Program Frequency, Signal Quality, Signal Strength, Bitrate, Codec, Channel and Date.

Showing Signal Strength

While you selected signal strength, a signal bar with the strength of the current station will show on the display.

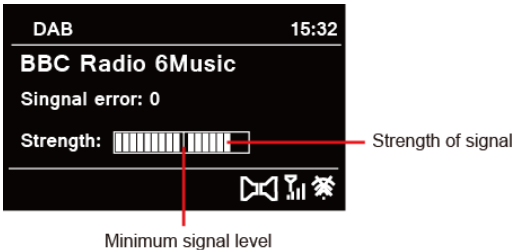


The indicator on the signal bar shows the minimum acceptable signal level.

 **Note:** Stations with signal strength below the minimum signal level may not provide a steady stream of audio.

Storing Preset Stations

Your radio can store up to 12 of your favourite DAB/DAB+ stations. This will enable you to access your favourite stations quickly and easily.


- 1. While playing your favourite station, press and hold **PRESET** button until display shows as below:

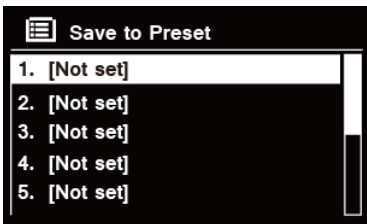

- 2. Turn **SCROLL/SELECT/SNOOZE** knob to cycle through the preset numbers 1-12.
- 3. Select one preset number and then press the **SCROLL/SELECT/SNOOZE** knob, display will show 'Preset stored'.
- 4. Preset number 'P#' will show on the display.

Recalling a Preset Station

1. Press **PRESET** button to show the saved preset stations.

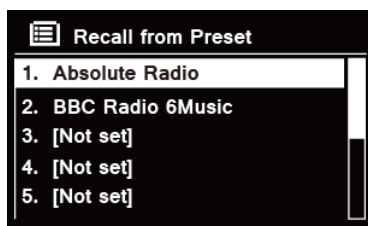


2. Turn **SCROLL/SELECT/SNOOZE** knob to select the preset station you want to play and then press the **SCROLL/SELECT/SNOOZE** knob to confirm.
3. The display will show 'Preset Empty' if the preset station isn't allocated.

FM Mode

Selecting FM Mode

1. Press **MODE** button repeatedly to select FM mode.
2. For initial use, it will start at the beginning of the FM frequency range (87.50MHz). Otherwise, the last listened FM station will be selected.

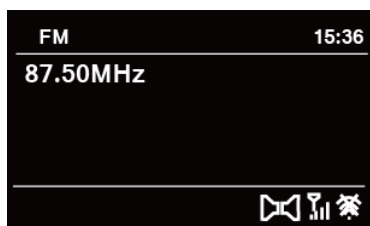

3. To manually change the FM frequency, while FM frequency shows up, turn **SCROLL/SELECT/SNOOZE** knob clockwise or anticlockwise to change the frequency by 0.05MHz per step.
4. To automatically scan, while FM frequency shows up, turn **SCROLL/SELECT/SNOOZE** knob clockwise or anti-clockwise and then press **SCROLL/SELECT/SNOOZE** knob, your radio will skip forward or backward until it reached the next available station.

Scan settings

This enables you set FM scans stop at stations with strong signal or stop at any available station.

1. Press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'Scan setting', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Display will show 'Strong stations only?', turn **SCROLL/SELECT/SNOOZE** knob to select 'YES', and then press **SCROLL/SELECT/SNOOZE** knob to confirm. The scans stop only at stations with good signal strength.
3. Turn **SCROLL/SELECT/SNOOZE** knob to select 'NO', and then press **SCROLL/SELECT/SNOOZE** knob to confirm. The scans stop at any available station. This may result in a poor signal-to-noise ratio (hiss) from weak stations.

Audio Settings


By default, all stereo stations are reproduced in stereo. For weak stations, this may result in a poor signal-to-noise ratio (hiss).

1. To play weak stations in mono, press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'Audio setting', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Display will show 'Listen in Mono only?', turn **SCROLL/SELECT/SNOOZE** knob to select 'YES', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.

Storing Preset Stations

Your radio can store up to 12 of your favourite FM stations. This will enable you to access your favourite stations quickly and easily.


1. While playing your favourite station, press and hold **PRESET** button until display shows as below:

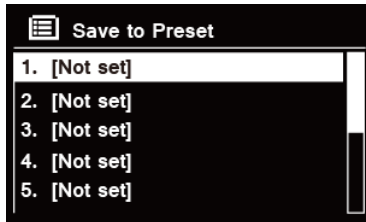

2. Turn **SCROLL/SELECT/SNOOZE** knob to cycle through the preset numbers 1-12.
3. Select one preset number and then press the **SCROLL/SELECT/SNOOZE** knob, display will show 'Preset stored'.
4. Preset number 'P#' will show on the display.

Recalling a Preset Station

1. Press **PRESET** button to show the saved preset stations.

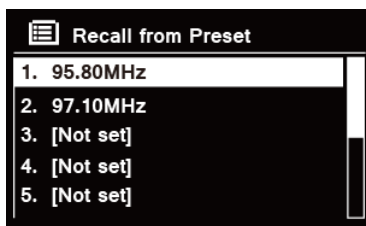


2. Turn **SCROLL/SELECT/SNOOZE** knob to select the preset station you want to play and then press the **SCROLL/SELECT/SNOOZE** knob to confirm.
3. The display will show 'Preset Empty' if the preset station isn't allocated.

CD Mode

Inserting CD


Insert a CD into CD slot with the imprinted side facing up, the radio will switch to CD mode and the display will show 'READING' after few seconds.


Alternatively, press **MODE** button repeatedly to select CD mode, and then insert a CD.

 *Do not insert any mini CDs or audio carriers into the CD slot which differ from the standard CD formats. Those may potentially not play properly and may not be ejected again.*
Only insert one CD at the time into the CD slot. CD with format CD, MP3 and WMA are compatible.

Playing CD Track

1. During Audio CD playback, the display shows the track number and the elapsed time.

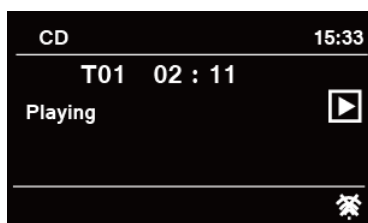








 
-  **Note:** *CD may jumps and plays inconstantly due to unit vibrate when playing track with heavy bass at high volume level. Turn down the volume is recommended.*
2. When a track is playing, you can:
 - a. Press **⏮** button on the unit or remote control to return to the beginning of track, press **⏮** button a second time to skip to previous track.
 - b. Press and hold **⏮** button on the unit or remote control to fast reverse current playing track.
 - c. Press **⏭** button on the unit or remote control to skip to next track.
 - d. Press and hold **⏭** button on the unit or remote control to fast forward current playing track.
 - e. Press **⏸** button on the unit or remote control to pause or play current playing track.
 - f. Press **🔄** button repeatedly on the remote control to set track play mode. The play mode: Repeat one/Repeat all/Shuffle/None.
 - g. Press **■** button on the unit or remote control to stop playing.
3. In CD STOP mode, if the disc is a normal audio CD, the display shows the total number of tracks and the total track time.

Ejecting CD from CD Slot

Press **▲** button, the display will show 'Eject', and then CD can be ejected from CD slot.

Bluetooth Mode

Pair the unit with a Bluetooth device to listen to music:

1. Press the **MODE** button to select Bluetooth mode.
2. The display will flash in  repeatedly.
3. Activate your Bluetooth device and select the search mode.
4. 'DigitRadio 455' will appear on your Bluetooth device.
5. Select 'DigitRadio 455' and enter "0000" for the password if necessary.
6. The  icon will remain steadily on the display when connection is successful.
7. While a track is playing, you can:
 - a. Press  button on the unit or remote control to return to the beginning of track, press  button a second time to skip to previous track.
 - b. Press and hold  button on the unit or remote control to fast reverse current playing track.
 - c. Press  button on the unit or remote control to pause or play current playing track.
 - d. Press  button on the unit or remote control to skip to next track.
 - e. Press and hold  button on the unit or remote control to fast forward current playing track.
8. To disconnect the Bluetooth connection, press **MENU** button, turn **SCROLL/SELECT/SNOOZE** knob to select 'BT disconnect', and then press **SCROLL/SELECT/SNOOZE** knob to confirm. The display will show 'Device disconnect?', turn **SCROLL/SELECT/SNOOZE** knob to select 'YES', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.

NFC (Near Field Communication)


NFC enables you pair and connect with Bluetooth devices in an easy way.

1. Press **MODE** button repeatedly to select Bluetooth mode.
2. Make sure that your NFC is turned "On" on your mobile device.
3. Hold your mobile device about 2cm close to NFC sensor on top panel for receiving an auto-connection between your mobile device and radio.
4. Your device then will turn-on Bluetooth automatically and will pair your device with radio. No additional settings are necessary.

Aux in Mode

AUX IN allows for quick and easy connection to an MP3 player or other external audio sources.

1. Before connecting to the mains socket, use a 3.5mm audio cable (not supplied) to connect to your external audio device through the **AUX IN** socket at the rear of unit.
2. Connect power adaptor to mains socket, press **VOLUME/⏻** knob to switch unit on.
3. Press **MODE** button repeatedly to select Auxiliary Input mode.

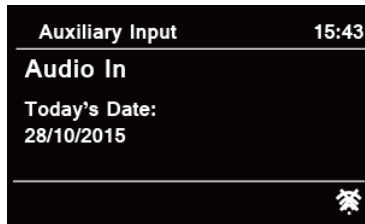


4. In Aux in mode, you may operate your audio device directly for playback features.
5. To gain optimal volume levels, adjusting the output volume level on the audio device as well is recommended.

General Operation

Setting Sleep

This feature enables your radio to switch to standby mode by itself after a set sleep time.


1. Press **MENU** button - **Main menu - Sleep**, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Turn **SCROLL/SELECT/SNOOZE** knob to select a sleep time, and then press **SCROLL/SELECT/SNOOZE** knob to confirm. The sleep icon  and sleep time will show on the display. The sleep time options: Sleep OFF/15/30/45/60 MINS,
3. To turn the sleep function off while the sleep timer is still counting down, select 'Sleep' option, turn **SCROLL/SELECT/SNOOZE** knob to select 'Sleep OFF'.

 **Note:** Alternatively, you can press **SLEEP** button repeatedly to set sleep time as well.

Setting Alarm



Your radio includes dual alarms. Set Alarm, making sure set time at first.

1. Press **MENU** button - **Main menu - Alarms**, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Turn **SCROLL/SELECT/SNOOZE** knob to select '**Alarm 1**' or '**Alarm 2**', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.

 **Note:** Alternatively, you can also press **ALARM** button and then turn **SCROLL/SELECT/SNOOZE** knob to select '**Alarm 1**' or '**Alarm 2**', press **SCROLL/SELECT/SNOOZE** knob to confirm.

3. Turn **SCROLL/SELECT/SNOOZE** knob to select options, and then press **SCROLL/SELECT/SNOOZE** knob to confirm the setting.

Enable:	Alarm active day: Off, Daily, Once, Weekends or Weekdays
Time:	Alarm time: 00:00 (manually set up the time)
Mode:	Alarm mode: Buzzer, Internet radio, DAB, FM or CD (If the wake-up mode is DAB and the DAB signal strength is low, or wake-up mode is CD and there is no CD in the radio, the buzzer alarm will be triggered.)
Preset:	Last listened or saved preset station (not available for Buzzer and CD mode).
Volume:	Alarm volume
Save:	Save the alarm

4. When the display shows 'Alarm Saved', the alarm setting is successful.  or  will show on the display.
5. **To temporarily switch off alarm**, press **SCROLL/SELECT/SNOOZE** knob repeatedly to set snooze time for 5, 10, 15 or 30 minutes in turn. The unit will go to standby and snooze time will show on the display.

6. **To turn off alarm**, press **ALARM** button when the alarm sounds.
7. **To cancel Alarm**, refer to steps 1-3 to enable alarm 'Off'. ① or ② will disappear from display

Setting Equaliser

This feature enables you to choose a sound equalization profile. Each of the equalization setting will change the tone of the sound from your radio when selected.

1. Press **MENU** button - **Main menu - System settings - Equaliser**, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Turn **SCROLL/SELECT/SNOOZE** knob and then press it to select a profile. The equalization profile options: Normal/Jazz/Rock/Movie/Classic/Pop/News/My EQ/My EQ profile setup.
3. To set up My EQ, select 'My EQ profile setup', and then press **SCROLL/SELECT/SNOOZE** knob to confirm. Turn **SCROLL/SELECT/SNOOZE** knob to select 'Bass' or 'Treble', and then press **SCROLL/SELECT/SNOOZE** knob to confirm. Turn **SCROLL/SELECT/SNOOZE** knob to change the value of Bass or Treble, and then press **SCROLL/SELECT/SNOOZE** knob to confirm. Press **BACK** button, display will show 'Save changes'. Turn and press **SCROLL/SELECT/SNOOZE** knob to select 'YES' to save changes.

Network Setup

Users encountering networking issue may find these options useful for diagnosing and fixing network problems.

1. Press **MENU** button - **Main menu - System settings - Network**, press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Turn **SCROLL/SELECT/SNOOZE** knob to select your preferred network setting option:

Network wizard:	Scan for available networks
PBC Wlan setup:	Set up a WPS encrypted network (only support the router uses WPS 2.0)
View settings.:	View network settings such as MAC address, Wlan region, IP address etc.
Manual settings:	Set wired and wireless connection
NetRemote PIN setup:	Set a Net Remote Pin code
Network profile:	List of registered networks or press SCROLL/SELECT/SNOOZE knob delete some unwanted networks
Clear network settings:	Clear current network settings
Keep network connected:	Keep network connected in DAB, FM, CD, Bluetooth, Aux in and standby modes

3. Press **SCROLL/SELECT/SNOOZE** knob to confirm your setting.

Setting Time/Date

- 1. Press **MENU** button - **Main menu** - **System settings** - **Time/Date**, press **SCROLL/SELECT/SNOOZE** knob to confirm.
- 2. Turn **SCROLL/SELECT/SNOOZE** knob to select options, and then press **SCROLL/SELECT/SNOOZE** knob to confirm the setting.

Set Time/date:	Manually set-up both Time and Date
Auto update:	'Update from DAB, 'Update from FM', 'Update from Network' or 'No update'
Set format:	12 or 24 hour format
Set timezone:	Select a timezone (Only available when auto update from Network.)
Daylight saving:	Daylight saving settings (Only available when auto update from Network.)

- 3. Then setting time according to your personal preference.

Setting Language

This feature enables you to change menu language. There are thirteen languages available: English/Danish/Dutch/Finnish/French/German/Italian/Norwegian/Polish/Portuguese/Spanish/Swedish/Turkish.

- 1. Press **MENU** button - **Main menu** - **System settings** - **Language**, press **SCROLL/SELECT/SNOOZE** knob to confirm.
- 2. Turn **SCROLL/SELECT/SNOOZE** knob to select your language, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.

Factory Reset

Doing a factory reset clears all user defined setting, replacing them with the original default values, so time/date, DAB station list and preset stations are all lost.

- 1. Press **MENU** button - **Main menu** - **System settings** - **Factory Reset**, press **SCROLL/SELECT/SNOOZE** knob to confirm.
- 2. Turn **SCROLL/SELECT/SNOOZE** knob to select 'YES', and then press **SCROLL/SELECT/SNOOZE** knob to confirm.

Software Update – Over the network

From time to time, your radio may make software upgrades available with bug fixes and/or additional features.

If your radio detects that newer software is available, it will ask if you want to go ahead with an update. If you agree, the new software is then downloaded and installed.

After a software upgrade, all user settings are maintained.

C A U T I O N

Before starting a software upgrade, ensure that your radio is plugged into a stable mains power connection. Remove power during a software update may permanently damage the unit.

1. Press **MENU** button - **Main menu** - **System settings** - **Software update**, press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Turn **SCROLL/SELECT/SNOOZE** knob to select 'Auto-check setting', your radio will check periodically for new version software.
3. Turn **SCROLL/SELECT/SNOOZE** knob to select 'Check now', your radio will now to check new version software and automatically upgrade the detected new version software.

Setup Wizard

When this unit is started for the first time, it runs through a setup wizard to configure settings for date/time and network. Once this has finished, the system is ready to use in most modes.

Redo setup wizard will not erase user settings such as searched stations and presets.

1. Press **MENU** button - **Main menu** - **System settings** - **Setup wizard**, press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Turn **SCROLL/SELECT/SNOOZE** knob to select 'YES', and then press **SCROLL/SELECT/SNOOZE** knob to confirm. Please refer to page 10 for following settings.

Viewing System Info

This information may be requested when dealing with technical support issues.

1. Press **MENU** button - **Main menu** - **System settings** - **Info**, press **SCROLL/SELECT/SNOOZE** knob to confirm.
2. Turn **SCROLL/SELECT/SNOOZE** knob to view 'SW version', 'Spotify version', 'Radio ID' and 'Friendly Name'.

Setting Backlight


- 1. Press **MENU** button - **Main menu - System settings - Backlight**, press **SCROLL/SELECT/SNOOZE** knob to confirm.
- 2. Turn **SCROLL/SELECT/SNOOZE** knob to select 'Operation mode' or 'Standby Mode', then press **SCROLL/SELECT/SNOOZE** knob to confirm.
- 3. Turn **SCROLL/SELECT/SNOOZE** knob to select backlight level, and then press **SCROLL/SELECT/SNOOZE** knob to confirm the setting.


Operation Mode	<ul style="list-style-type: none">• High• Medium• Low
Standby Mode	<ul style="list-style-type: none">• High• Medium• Low• Off


Multi-room

Multi-room is a feature that enables you control your radio (one or more) via UNDOK App for playback.

You can enjoy music by using your smartphone or tablet which has UNDOK App to respectively control the radios (multi-room capable devices) in the kitchen, bedroom or living room. Of course you also can group control the radios for playing.

- 1. To use multi-room feature, download **UNDOK**  app from **App Store** for your iOS smartphone or download from **Google Play** for your Android smartphone.
- 2. Start UNDOK app, making sure your radio and smartphone are connected to same network.
- 3. All available devices will be listed. Tap your radio 'DigitRadio 455 xxxxxxxxxxxx' (the 12 digit alphanumeric code is the MAC address of your radio) to connect to.
- 4. Now playing screen is shown. (Playing Internet radio mode for example.)

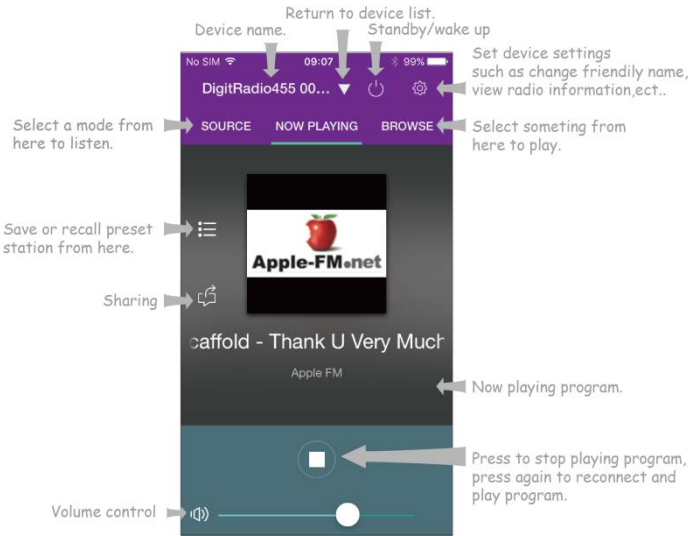


5. If you have more than one radio (multi-room capable device), you can group them to play synchronously. Tap the ▼ 'Return to device list' icon.
6. Create group, tapping the edit icon  which is following device name on device list, and then

'Group Setup' screen will be shown. (Please refer to Figure 1 and 2.)

Tap the grey circle before device name which is under 'Sharing with' option on 'Group setup' screen and make it turn green to add the device to group. (Please refer to Figure 2.)

Tap 'Rename' under 'Group name' option on 'Group Setup' screen to enter a group name or select one usual name from the list, and then select 'Done' to create group. (Please refer to Figure 2 and 3.)

 **Note:** to dissolve the group, tap 'Delete group' to delete the group. (Please refer to Figure 2 and 7.)

Device list will appear again and the group will be shown with group name and the devices in the group. Tap on group name to select the group. (Please refer to Figure 4.)

All clients in the group will synchronously play the program which the master device is playing.

You can drag the volume control bar to change the master volume for all grouped devices.

You also can tap on the volume control and then change volume for each device respectively.

(Please refer to Figure 5 and 6.)


 **Note:** master device is which you selected from device list for editing group; client is the device you selected sharing with on 'Group Setup' screen.

Figure 1

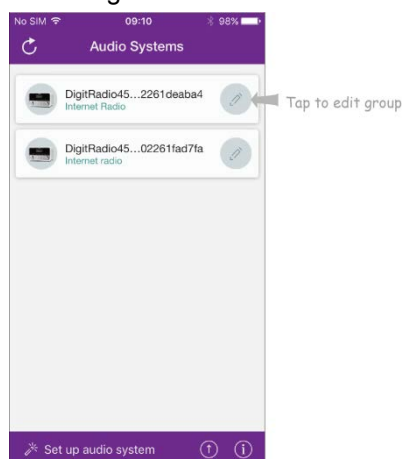


Figure 2

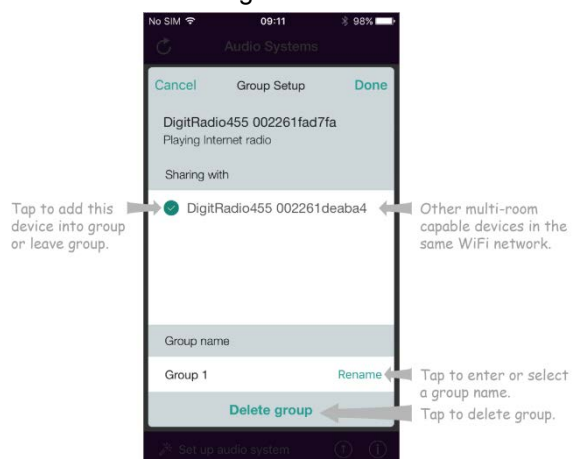


Figure 3

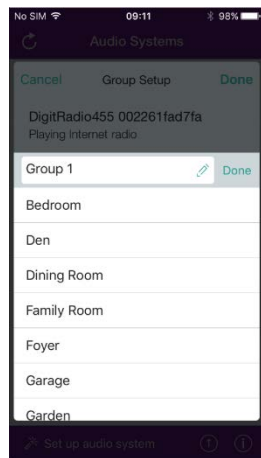


Figure 4

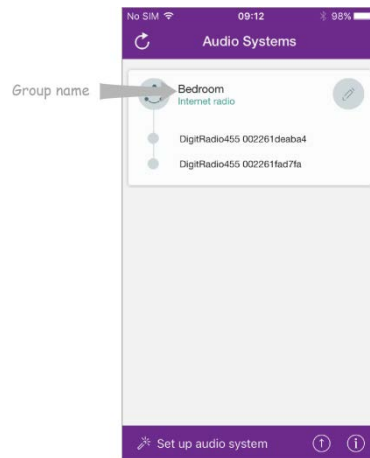


Figure 5


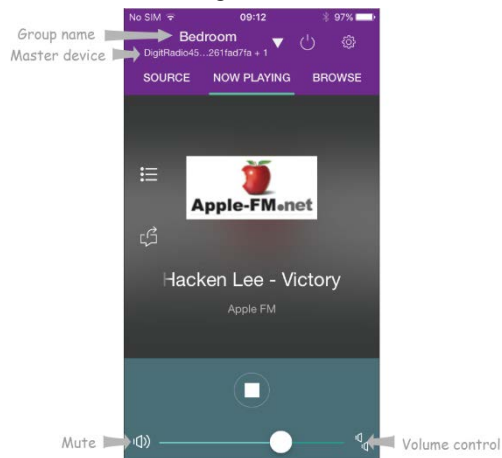


Figure 6




Figure 7

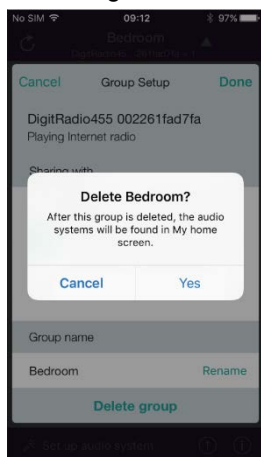

7. Alternatively, you can edit group through your radio.
 - a. Press **MENU** button - **Main menu** - **System settings** - **Multi-room**, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.
 - b. Turn **SCROLL/SELECT/SNOOZE** knob to select options, and then press **SCROLL/SELECT/SNOOZE** knob to confirm.

View details	View your radio state (Ungrouped, Server or Client) and the group which it belong to.
Create new group	Create a new group that your radio will be joined.
Add to group	Devices in current network will be listed. Select the device you desired to add to the group which your radio belong to.
List current clients	Clients in the group which your radio belong to will be listed. Select a client will remove it from group.
Leave group	Remove your radio from group
Dissolve group	Dissolve the group which your radio belong to.

8. To ensure you can use UNDOK app when your radio is in all modes especially in non-internet modes (i.e. in DAB, FM, CD, Bluetooth and Aux in mode) you need to select **Main menu** - **System settings** - **Network** - **Keep network connected** - **YES**. This also allows you to wake the radio from standby using your UNDOK app.

 **Note:** *If unattended to use radio for long periods of time, e.g. overnight, while on holiday or while out of the house, select 'NO' to avoid unnecessary energy consumption. Your radio cannot be waked-up by using UNDOK app once you set 'Keep network connected' to 'NO'.*

Troubleshooting


If a problem occurs, it may often be due to something very minor. The following table contains various tips.

Problem	Solution
No Power.	<ul style="list-style-type: none">● Ensure the mains cable is properly connected or battery power is not used up.● Make sure that the unit is turned on.
The unit does not respond when pressing any buttons.	<ul style="list-style-type: none">● The unit may freeze up during use. Switch the unit off and then on again to reset it.
Cannot find my network.	<ul style="list-style-type: none">● Make sure the Wi-Fi router is plugged in and working.● Reconnect the radio to your Wi-Fi.● Check you radio is within 5m of your router.
Poor radio reception.	<ul style="list-style-type: none">● Make sure the antenna is fully extended.● Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
Desired station not found.	<ul style="list-style-type: none">● Weak signal. Search manually.
I cannot find "DigitRadio 455" on my Bluetooth device.	<ul style="list-style-type: none">● Ensure the Bluetooth function is activated on your Bluetooth device.● Re-pair the unit with your Bluetooth device.

If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

Specifications

Items	Specifications
Description:	Internet, DAB/DAB+ and FM Digital Radio with CD and Bluetooth
Frequency Range:	FM: 87.5-108 MHz DAB/DAB+: 174.928-239.200 MHz
Power Requirements:	AC Input: 110-240V~, 50-60 Hz DC Output: 18V, 3300mA (please use our provided adaptor)
Audio Output Power:	20 W rms x 2 (Left, right channels) +30 W rms (Subwoofer)
Power Consumption:	Operation: 59.4W (Max) Standby: < 1W
Dimension (W x D x H):	400mm x 215mm x 175mm

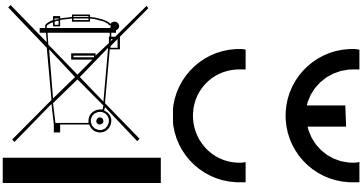

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. For more information, please contact the local authority or your retailer where you purchased the product.